



Sony RDR HX750 HX950 Disassembly

How to open sony rdr hx

Written By: Cafony




INTRODUCTION

Sony rdr hx750 hx950 Fix

Remove DVD drive



Remove Hard Disk

Step 1 — Remove Sony RDR HX750 cover

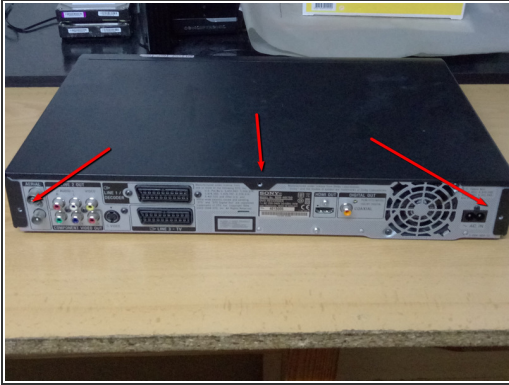


- Remove Screws from back and sides

Step 2 — Remove Hard Disk

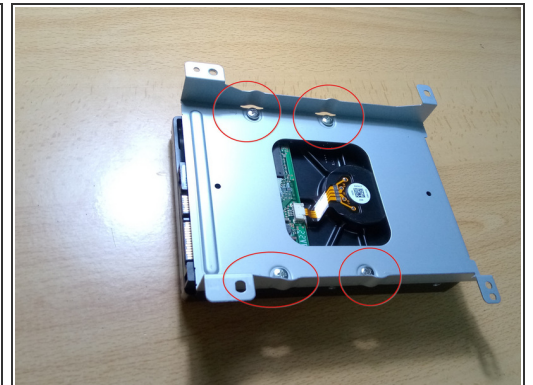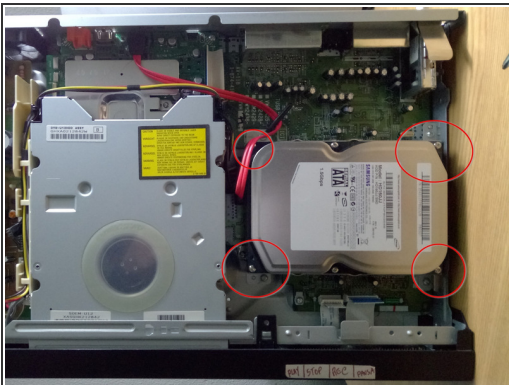


- Remove the screws that old hard drive
- Unplug the cables from disk
- Remove screws from back side of hard drive

Step 3 — Remove DVD player

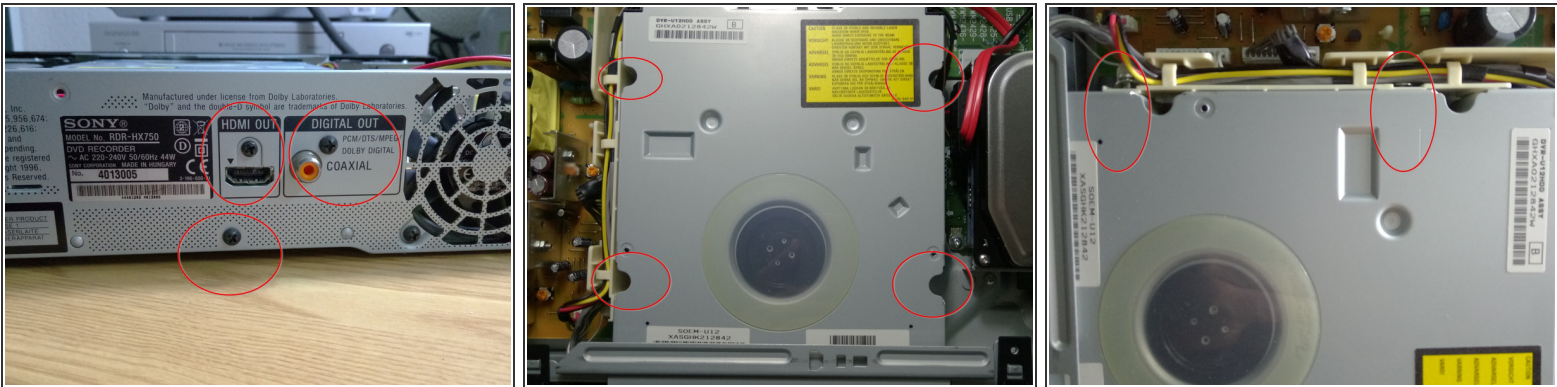


- Remove screws from back
- Remove Screws from dvd cover
- Remove screws from plastic cable holder

Step 4 — Remove front Panel

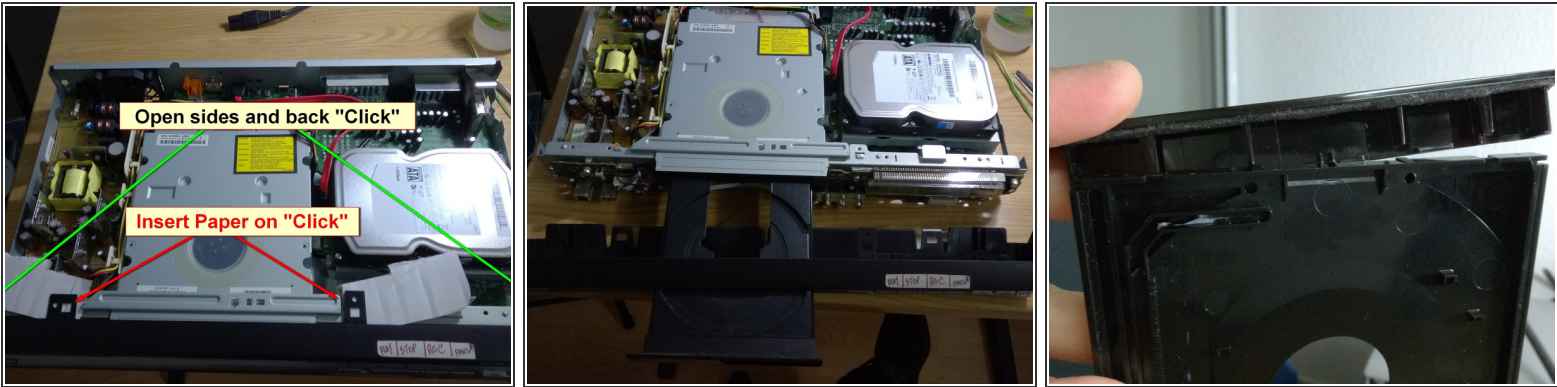


- Insert little paper under each "click" to remove front panel.
- When each "click" is loose, push front panel gently, it will go out easily.
- The table of compact disk has a little plastic in front that goes out "up" with a "click"

Step 5 — Remove DVD block

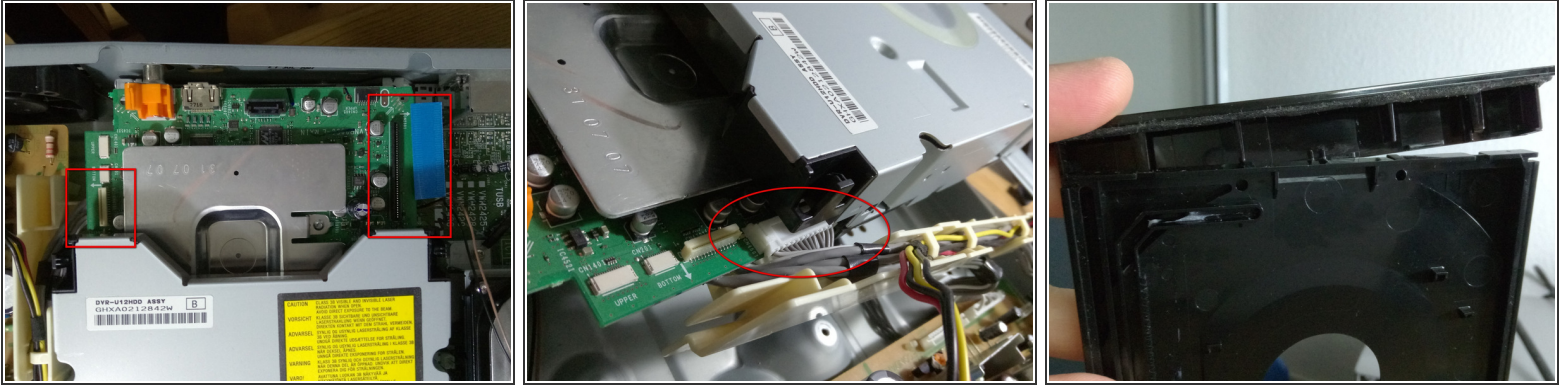


- Unplug the cables show on foto.
- Desconnect this cable hided on the side.
- Remove the little piece on cd reader, It has a click.

Step 6 — Remove cover of dvd player

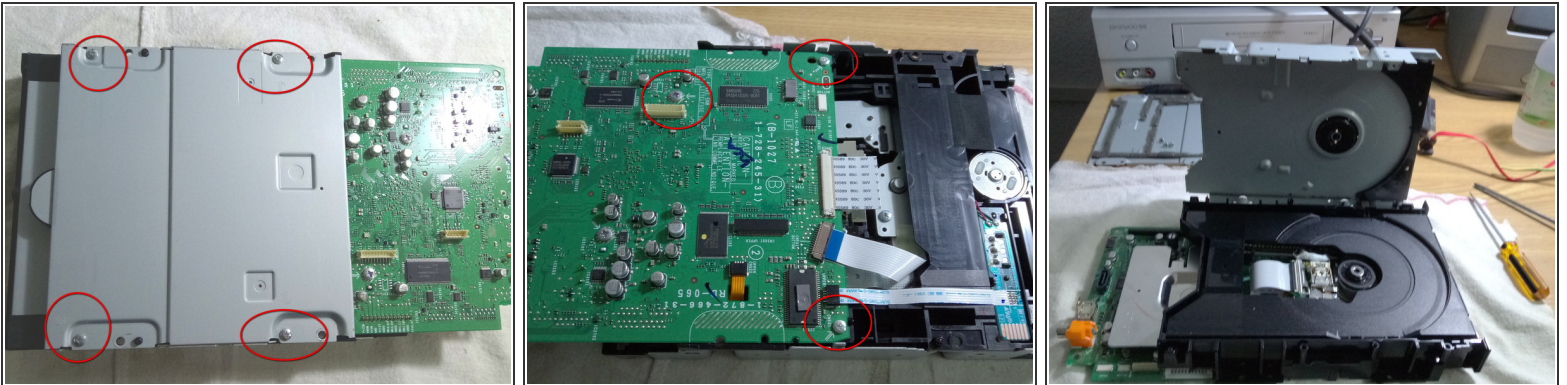

- Under the dvd block remove screws
- Then remove screws on board
- Now you can access the laser

Step 7 — Sony RDR HX750 laser

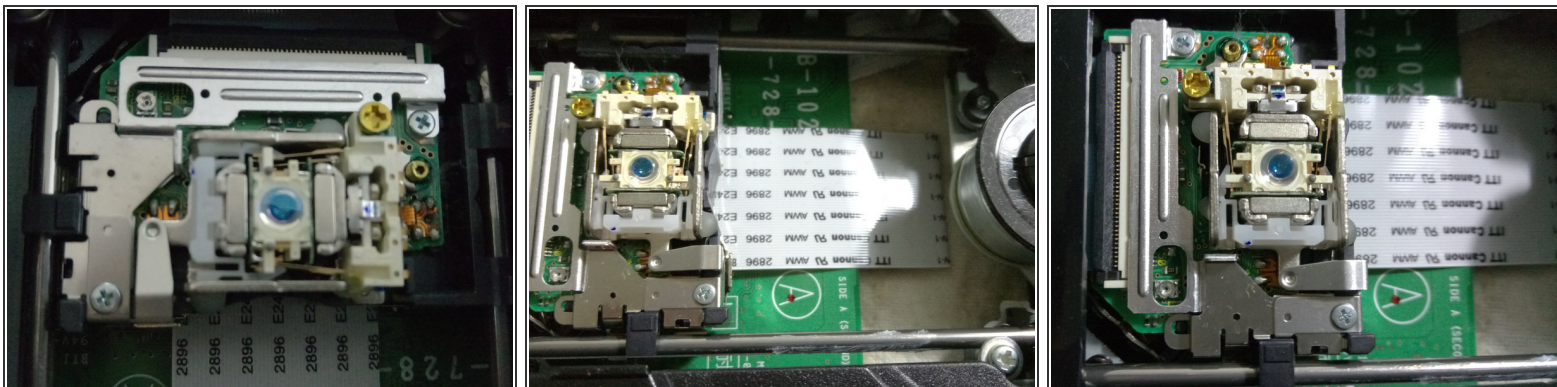

- [Inserir instruções aqui.](#)

To open this dvd recorder folow this tutorial

This document was last generated on 2017-09-13 09:27:44 PM.